


# A Series Ø22

## 選択形押しボタンスイッチ


### 形式の呼び方

 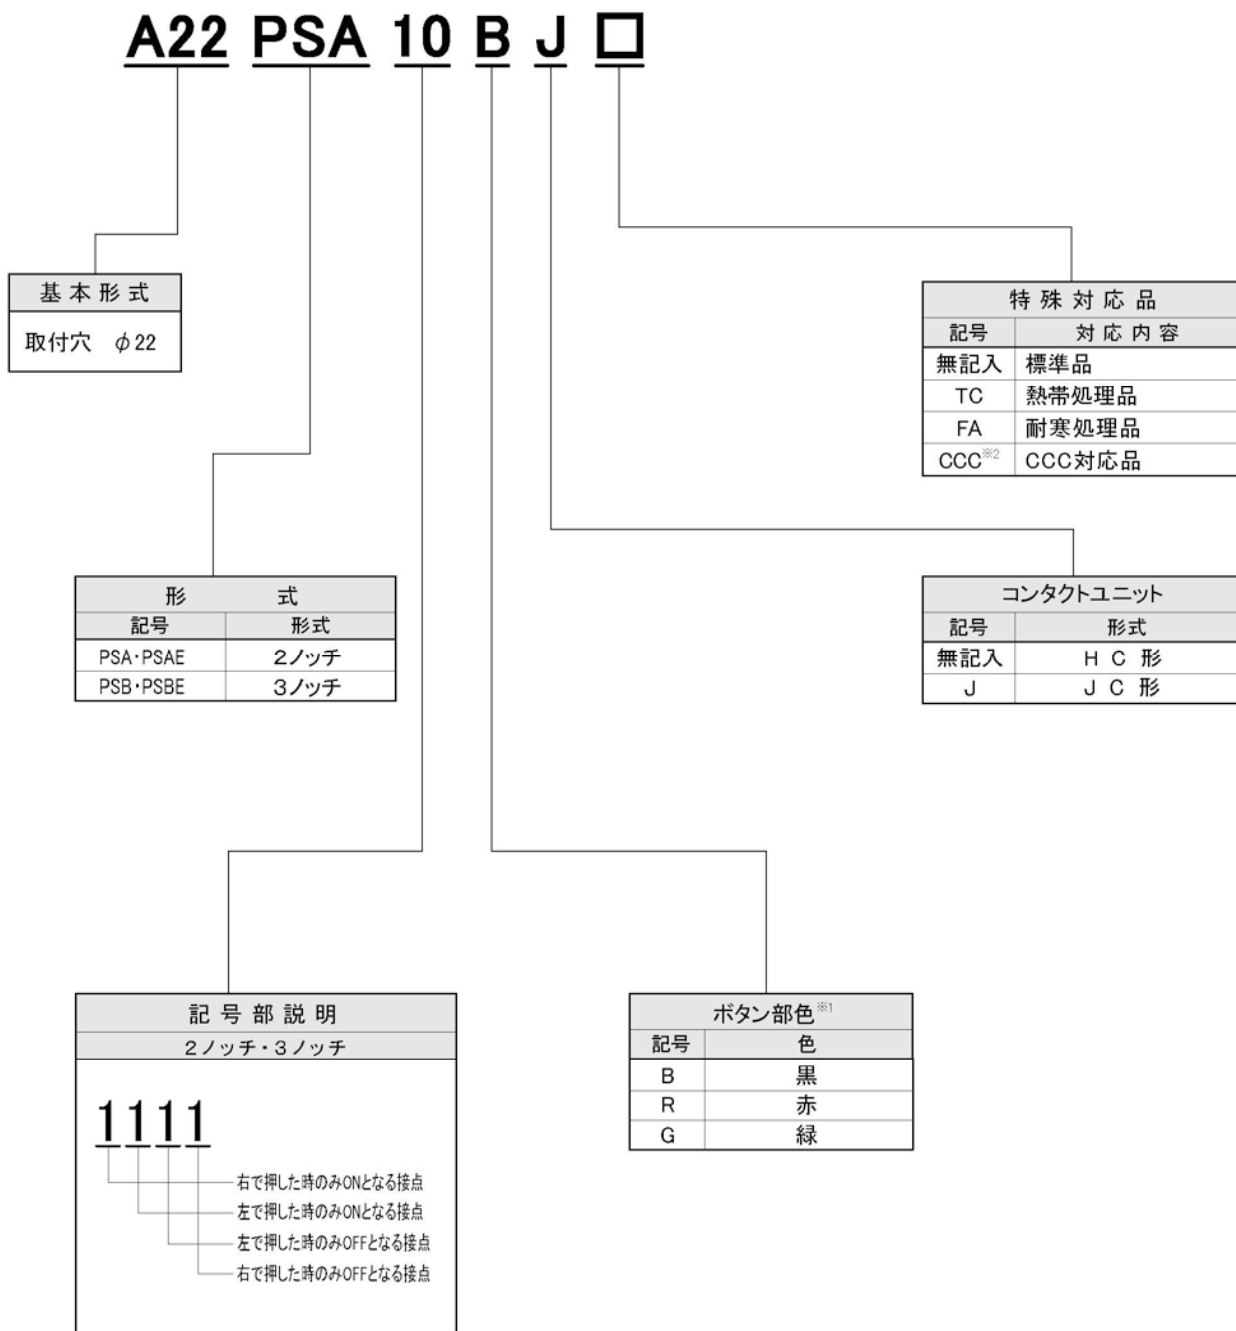


※1 つまみ部の色は黒のみとなっております。


※2 形式ラベルには、CCCと記載されません。CCC対応品には認証シールが貼付られています。CCC対応品一覧はP11をご覧ください。

2ノッチ

外 観	リング 材質	接点構成		ノ ッ チ				動作特性	ご注文形式	ボタン部色 □内指定		
		No <sup>※1</sup>	種類	左		右						
				押す	通常	通常	押す					
	金属	11	1	a	●				A22PSA11□	[記号]		
			2	a				●				
		22	1	a	●						●	A22PSA22□
			2	a							●	
			3	a	●						●	
			4	a							●	
		1111	1	a	●						●	A22PSA1111□
			2	a							●	
			3	b			■	■				
			4	b			■	■				
		0011	1	b			■	■				A22PSA0011□
			2	b			■	■				
	0022		1	b			■	■		A22PSA0022□		
			2	b			■	■				
		3	b			■	■					
		4	b			■	■					
	2211	1	a	●				●	A22PSA2211□	[B]:黒		
		2	a					●				
		3	a	●				●				
		4	a					●				
		5	b			■	■					
		6	b			■	■					
	樹脂	11	1	a	●				A22PSAE11□	[R]:赤		
			2	a				●				
22		1	a	●				●			A22PSAE22□	
		2	a					●				
		3	a	●				●				
		4	a					●				
1111		1	a	●				●			A22PSAE1111□	
		2	a					●				
		3	b			■	■					
		4	b			■	■					
0011		1	b			■	■				A22PSAE0011□	
		2	b			■	■					
	0022	1	b			■	■		A22PSAE0022□			
		2	b			■	■					
3		b			■	■						
4		b			■	■						
2211	1	a	●				●	A22PSAE2211□	[G]:緑			
	2	a					●					
	3	a	●				●					
	4	a					●					
	5	b			■	■						
	6	b			■	■						



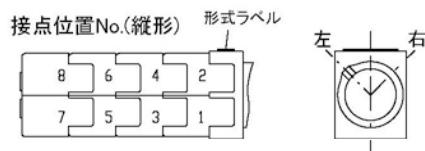

※1 接点ユニット取り付け位置(2ノッチ)




# A Series Ø22

## 3ノッチ

外 観	リング 材質	接点構成		ノ ッ チ					動作特性	ご注文形式	ボタン部色 □内指定		
		No※1	種類	左 押す	中 通常	※2 中立	右 通常	押す					
	金属	11	1 a	●						 左 55° 中 55° 右 手動:各55°	A22PSB11□	[記号]	
			2 a					●			A22PSB22□		
		22	1 a	●									A22PSB2211□
			2 a						●				
			3 a	●									
			4 a						●				
		1111	1 a	●									A22PSB0011□
			2 a						●				
			3 b										
			4 b										
		0011	1 b										A22PSB0022□
			2 b										
			3 b										
			4 b										
		2211	1 a	●									A22PSBE11□
			2 a								●		
			3 a	●									
			4 a								●		
	5 b												
	6 b												
	樹脂	11	1 a	●						[R]:赤 [G]:緑			
			2 a						●				
		22	1 a	●							A22PSBE22□		
			2 a						●				
3 a			●										
4 a								●					
1111		1 a	●						A22PSBE1111□				
		2 a						●					
		3 b											
		4 b											
0011		1 b							A22PSBE0011□				
		2 b											
		3 b											
		4 b											
0022		1 b							A22PSBE0022□				
		2 b											
		3 b											
		4 b											
2211	1 a	●						A22PSBE2211□					
	2 a								●				
	3 a	●											
	4 a								●				
	5 b												
	6 b												


※1 接点ユニット取り付け位置(3ノッチ)

接点位置No.(縦形) 形式ラベル

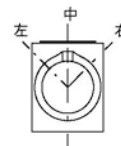

※2 つまみが中心にある時は、ボタンを押しても接点は動作しません。

選択形(2ノッチ)

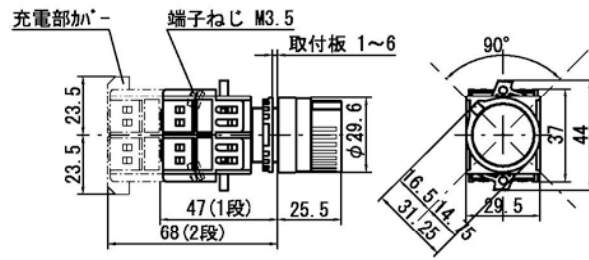

選択形(3ノッチ)

